


- NOTES:
1. DIMENSIONS SHOWN IN INCHES AND [mm].
 2. 5/8" STOP SHOWN.
 3. 12 GAGE REINFORCEMENT PLATE INSIDE DOOR IS RECOMMENDED AT DEVICE MOUNTING LOCATION.
 4. FOR LHR SEE TEMPLATE T2113.

"A" & "C" = #7 DRILL, 1/4-20 TAP
 "B" = #25 DRILL, 10-24 TAP

RESPONSIBILITY
 Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames regardless of the type, material or method of construction.

TEMPLATE
 METAL DOOR
 ECL-600, RHR
 NO TRIM

HDG. _____ DR. _____	
DETEX CORPORATION	
DO NOT SCALE DRAWING	
DATE 6-12-17	TEMPLATE NUMBER T2114 page 1 of 2

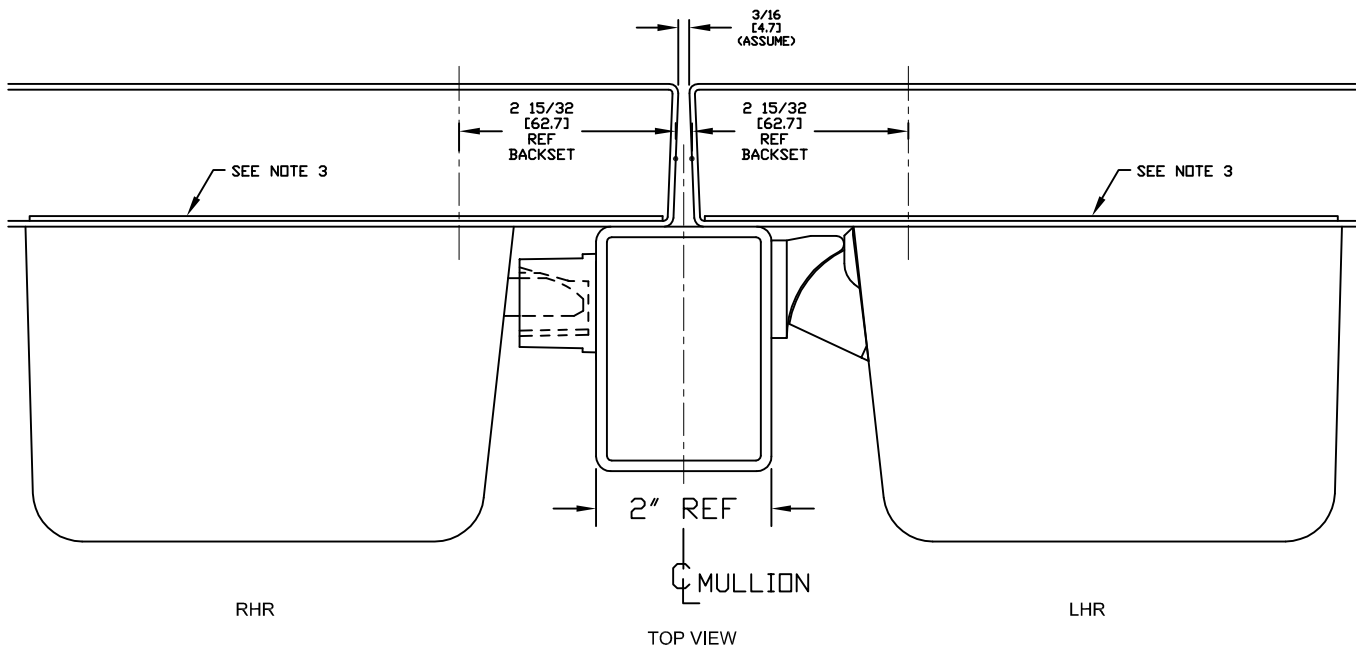

RHR

LHR

HDG. _____ DR. _____

RESPONSIBILITY
 Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames regardless of the type, material or method of construction.

TEMPLATE
 METAL DOOR
 ECL-600, RHR
 NO TRIM



DO NOT SCALE DRAWING

DATE 6-12-17	TEMPLATE NUMBER T2114 page 2 of 2
-----------------	--------------------------------------